# ECU-04 / ECU-05

# Universal Add-on Auto-Start Control For All Manual Key Start Generator Sets

#### Features

- Microprocessor Automatically Mimics The Manual Start Procedure
- Simple Installation, Without Changing Original Wiring
- Easy to Set Up, low-cost, Small Size, Low Power Consumption
- For Use In Gasoline And Diesel Generators
- Three Attempts Multi-Start Function
- Circuits Are Protected With 94-V0 Epoxy
- Two Adjustable Time Delay Potentiometers



## Specifications

DC Supply	12 VDC (ECU-XX-12V)	Ignition & Accessories Signal Output	30 Amp @ 12/24 VDC
	24 VDC (ECU-XX-24V)	Start Signal Output	30 Amp @ 12/24 VDC
Alternator Input Range	100~240 VAC	Pre-Heat or Carburetor Signal Output	30 Amp @ 12/24 VDC
	50~60 Hz	Auxiliary Signal Output	20 Amp @ 12/24 VDC


## Time Delay Setting And Alarm Indicators

L1	Remote Start Activated Indicator LED	VR1	Engine Pre-Heat Time Adjustment (1~25 Seconds)
L2	Generator Running Indicator LED	VR2	Starter Cranking Time Adjustment (1~25 Seconds)
L3	Start Fail Indicator LED	$\mathbf{SW}$	Function Selectable Switch

#### Environment

Operating Temperature -20~80 ℃ Relative Humidity Maximum 95%

## Mechanical Specifications (Unit: mm)

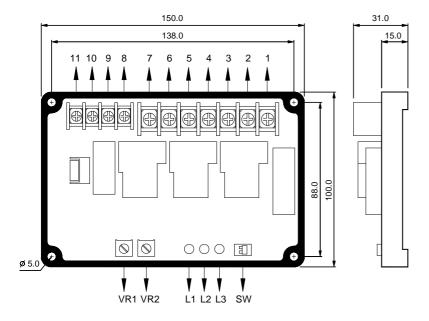

# ECU-04

SW On	For Use on Diesel Engine with Pre-Heat
SW Off	For Use on Gasoline Engine with Carburetor

### ECU-05

SW On	For Use Terminal NO.3 with Pre-Heat		
	Function		
SW Off	For Use Terminal NO.3 with Energize to Stop		
	Function		

## Physical Specification

Dimensions	150.0 (L) x 100.0 (W) x 31.0	(H) mm
------------	------------------------------	--------

Weight ECU-04 368 g  $\pm 2\%$ ECU-05 373 g  $\pm 2\%$