

Ruitai Industry Co.,Ltd

TEL:+86 577 80221899 FAX:+86 577 56667563

EMAIL:sales@china-avr.com WEB:http://www.china-avr.com

ADD:No.1402 Unit 15 Group 2 Xintianyuan, Xincheng Wenzhou 325000,Zhejiang China

Professional manufacturer of Stamford AVR, Leroysoner AVR R250, Marthon AVR, Siemens AVR, Deep Sea Starting System, Cummins speed control, Load Sharing module, Cummins Actuators, GAC Actuators, Caterpillar AVR R6, Mecc Alte AVR SR7, rectifier SSAYEC432, Diode Bridge 330-25777, Blaser AVR AVC63-7, Kutai AVR EA05A, SS053, MARELLI AVR M16FA655A, DSE5120, DSE5220, DSE5110, DSE501K, DSE704, etc.

GV 50 Multi function meter

◆ Brief introduction


GV50 is a light and low price-orientated module used for checking and demonstrating Voltage, Current, Frequency of generator. This module can replace old meters, for it can be one with multi-functions. the users can adjust and set the parameters by the button on the front face in order to meet the different requests. Besides, it uses the European-style terminals for connection which is more convenient for installation and detachment.



◆ Main features


- Voltage, Current and frequency can be checked and demonstrated in the mean time;
- High-light digital tube can demonstrate the parameters
- Chinese, English and coding demonstration
- The parameters can be set and adjusted by the button on the front face
- The option of over-speed alarm and its demonstration function is available



◆ Parameters adjustment and settings





Press , loose it when "PO" is displayed from L1, which shows the module is in the status of settings and display the first

option. PO's digital position is flashed, press  or 

to choose the option needed, then press  continuously till it is in the status of modifying; the data from L2 begins flashed,

press  or  to modify the parameters in current

option; press  to get back to the last menu after modifying.

At last, press  till "8888" is displayed from L3, save the

changed



parameter and exit from the mode.

It is active once modified.

◆ Operation manual

Manual recycling of parameters :



Press  or  to choose the option you want to check.

In this mode, if the users don't press any button for a long time, the mode will come into auto mode.

Auto self-recycling of parameters:

The module will display the parameters automatically at preset time.

Running mode:

The module will check each parameter once genset is started when the alarming is set but it will not alarm. It will alarm after safety time with the faulty. The generator set should be started again in order to clear alarm with the premise that the faulty has been dealt with, or it will alarm again.

Note:

The alarm shall occur if parameter is changed after generator set is started.

Ruitai Industry Co.,Ltd

TEL:+86 577 80221899 FAX:+86 577 56667563
EMAIL:sales@china-avr.com WEB:http://www.china-avr.com
ADD:No.1402 Unit 15 Group 2 Xintianyuan, Xincheng Wenzhou 325000,Zhejiang China
Professional manufacturer of Stamford AVR, Leroysoner AVR R250,Marthon AVR, Siemens AVR,Deep Sea Starting System,Cumminsspeed control,Load Sharing module,Cummins Actuators,GAC Actuators,Caterpillar AVR VR6,Mecc Alte AVR SR7,rectifierSSAYEC432,Diode Bridge330-25777 ,Blaser AVR AVC63-7,Kutai AVR EA05A,SS053,MARELLI AVR M16FA655A,DSE5120,DSE5220,DSE5110,DSE501K,DSE704..etc.

◆ Parameter-setting code list

| Code | Option | Range(default) |
|------|----------------------------|-------------------------------|
| P0 | Alarming output | 0 – Not used |
| | | 1 – output all the time |
| | | 2 – interval of 10s |
| P1 | Recycling time | 1 – 30s(5s) |
| P2 | Low frequency limit | 0 – 60Hz(40Hz) |
| P3 | Over frequency limit | 50 – 75Hz(57Hz) |
| P4 | Safety time | 0 – 360s(25s) |
| P5 | Over current protection | 0 – 5000A/(100A) |
| P6 | Transformer variable ratio | 50–2000A/5A(500A/5A) |
| P7 | Phase voltage undervoltage | 50 – 220V(176V) |
| P8 | Phase voltage overvoltage | 110 – 300V(264V) |

◆ Alarm indicator

| | |
|------|----------------|
| U--H | Over voltage |
| U--L | Low voltage |
| A--H | Over current |
| F--H | Over frequency |
| F--L | Low frequency |
| L1 | First phase |
| L2 | Second phase |
| L3 | Third phase |
| ERRO | alarming |

◆ Specification

Input power

DC 8~36 V

Alarming output

Output with powe,maximum DC1A

Operation temperature range:

-20℃ ~ 75℃


Size(W * H * D)

118mm * 72mm * 72mm

Installation Size(W * H):

67mm * 67mm

◆ Typical diagram

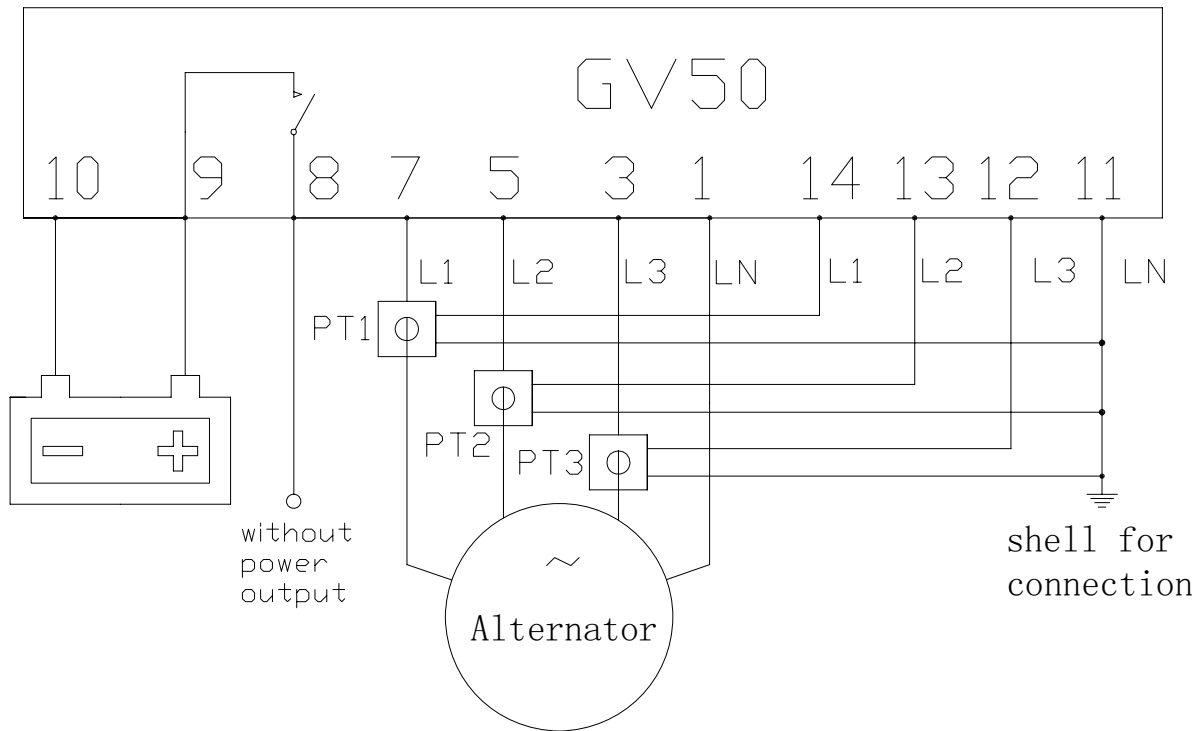

Note: No.10 should connect with negative of battery, No2, 4, 6 are with no usage.